



Smart Wire-Free Dual Camera Video Doorbell

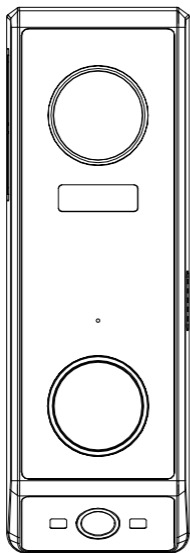



P10

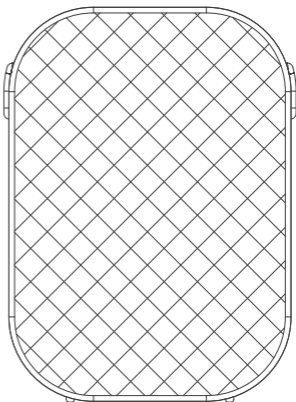

V1.0.1

Note: Manual contents are subject to change without notice in accordance with our policy of continuous product improvement.

1. Meet the doorbell

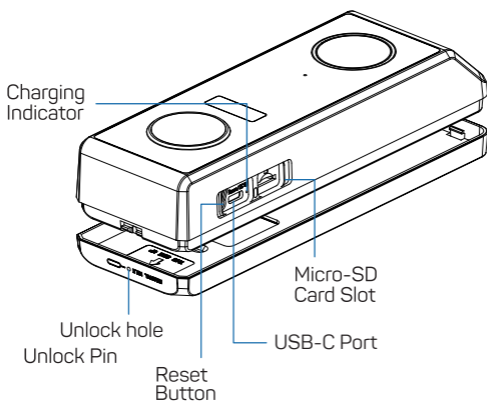
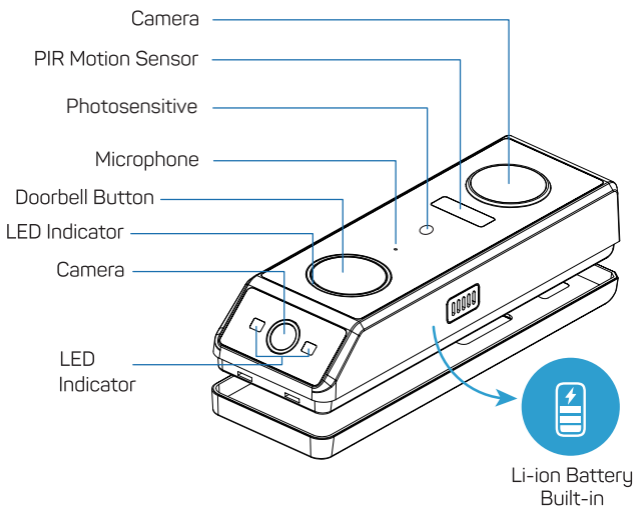


2. Meet the chime

Select Ringtone.

LED Indicator

Volume(Short Press)
Setting(Long Press)

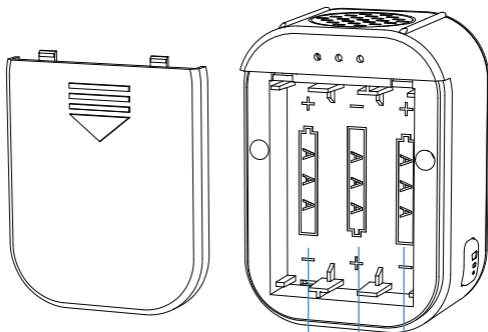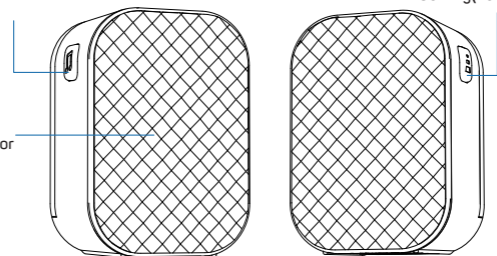



AAA Batteries ❶

❶ Please mind the battery polarities when installing.


3. Charge your doorbell

Prior to the doorbell installation, please charge up your doorbell for about 8-10 hours till the charging LED turns BLUE from RED.

LED STATUS	INDICATION
 Solid red	Battery charging
 Solid blue	Fully charged

Compatible charger (not provided):

USB type C mobile phone charger (DC 5V = 1A~2A).

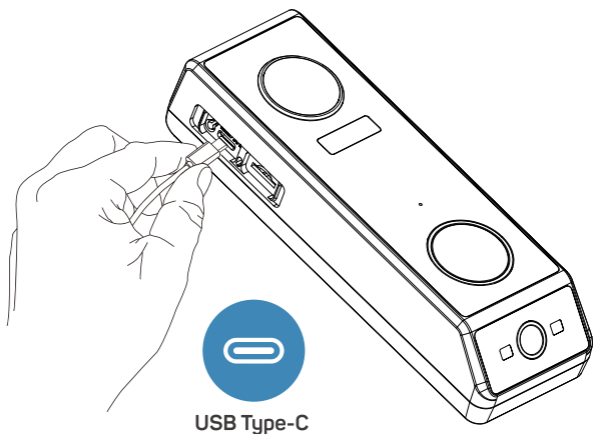


4. App download

Search 'CloudEdge' in the App stores or scan below QR codes to download the App.




5. Set up doorbell

- 1 Open the doorbell bracket mount and turn the power switch to Power ON/OFF.

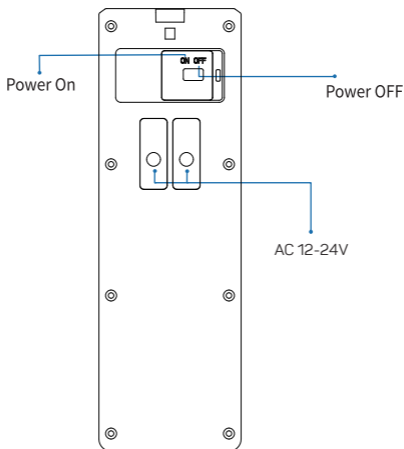



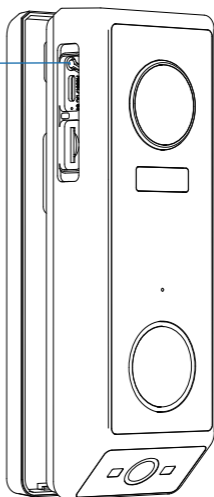



Press and hold reset button for 5 seconds to restore factory defaults.



2 Start setting up your doorbell following the in-app instructions.

3 Tips


- Please operate the setup near your Wi-Fi router.
- Make sure your phone is connecting to a 2.4GHz Wi-Fi.
- Make sure the doorbell is turned on, and its indicator LED is flashing red. If not, press and hold RESET for 5 seconds.
- Ensure the Wi-Fi signal is good, and the Wi-Fi password is correct.

LED STATUS	INDICATION
 Solid red	Device is abnormal.
 Flash red (once/sec)	Ready for Wi-Fi configuration.
 Flash red (twice/sec)	Connecting to Wi-Fi
 Solid blue	Device is online
 Flash blue (once/sec)	Live-viewing doorbell cam
 Flash blue (twice/sec)	Firmware upgrading


6. Pair with your indoor chime

- 1 Long press the above button of Chime and the chime is on the pair status for 5 seconds and then red LED light flash.



Select Ringtone.

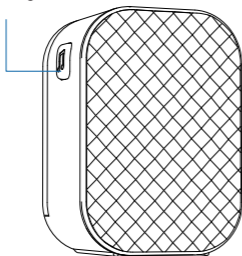

Volume(Short Press)
Setting(Long Press)

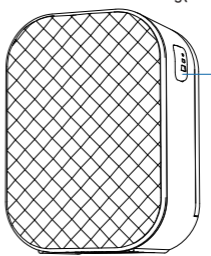

- 2 Press the doorbell button to send a pairing signal, and your chime will sound to react, together with its blue LED flashing. Chime Paring succeeds.

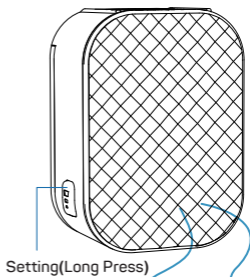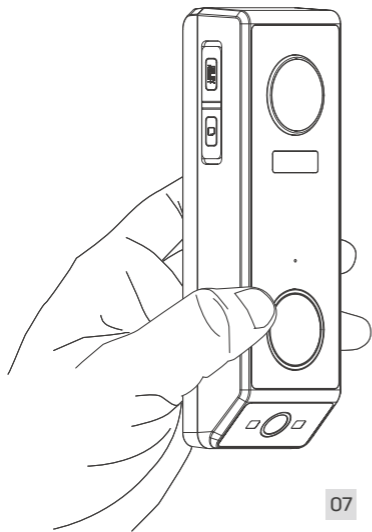

Chime rings &
indicator flashes blue

3 Chime settings.



Settings.

Long press Volume control button.

pair with doorbell

Press & hold for 5 seconds to restore factory defaults



Volume control button.

Short press Volume control button.

Volume control


Click to control volume: 5-speed volume.




Ringtone selection.

Click to change ringtone (38 ringtones available).

Select Ringtone.

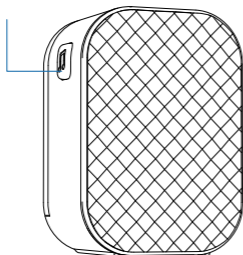

Volume(Short Press)
Setting(Long Press)

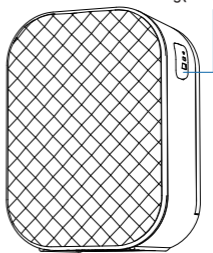


7. Install Your doorbell


- 1 Select location for your doorbell.




- 2 Mount your doorbell.

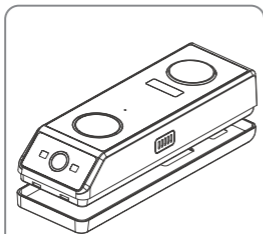


- A** Release the rear mount using the unlock pin.

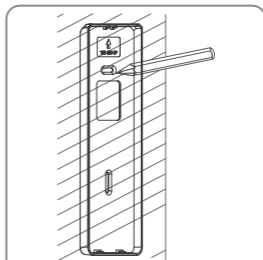


- B** Mark the screw holes with the doorbell mount.

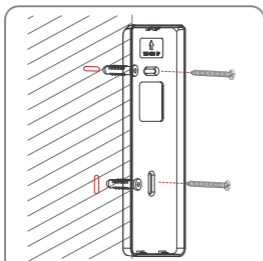


- C** Mount the rear mount to your wall with screws and tools.

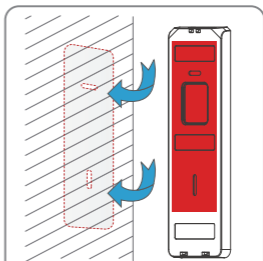

- D** Adhesive tapes are optional to mount the doorbell on flat surfaces.

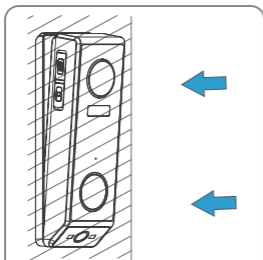

- E** Attach the doorbell to its rear mount, and push the doorbell to lock up.

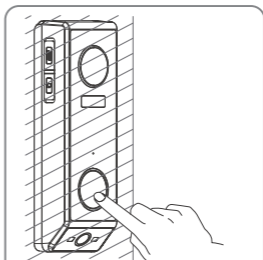

- F** All set! Press the doorbell button to run a test.

8. Trouble Shooting

Q1: Is the video doorbell powered by battery?

A1: Yes, there is a Li-ion battery built-in. Thanks to the low power consumption technology, a full charge lasts for more than 2 to 3 months in our lab test environment (Lab test condition: 10 events per day, 15 seconds video recording per event).

Q2: Can the PIR sensor sensitivity of this doorbell be adjusted?

A2: Yes, you can adjust the PIR sensing sensitivity according to your needs. In order to reduce the trouble caused by false alarms, it is recommended that you adjust the PIR sensitivity according to the actual situation after installation.

Q3: Does it work with existing mechanical chime?

A3: No. The doorbell comes with a battery powered wireless chime to notify people when your visitor presses the doorbell button. And our wireless chime is 100% wireless, you can place it almost everywhere you like. The transmission distance in open space is more than 100 meters (328 feet).

Q4: How many wireless chimes can be added to the doorbell?

A4: You can add several wireless chimes to work with your video doorbell. And one chime can be paired with upto 8 video doorbells.

Q5: Does it support customized Motion Detection Zones.

A5: Yes it does. You can customize the detection zone in the doorbell settings.

Q6: Does the doorbell support cloud storage?

A6: Your doorbell support local video storage by TF card . And you can also activate the cloud storage service in the App so as to back up video clips into the cloud server. There is a 7-day-free cloud recording trial service.

Q7: Does it support Alexa or Google home?

A7: The doorbell supports Alexa and Google home. You can set it according to your needs.